



BUS MASTER
MAIN - OFF - AUX

Honeywell 4PDT
Center Off (on-off-on)
p/n 4NT1-1

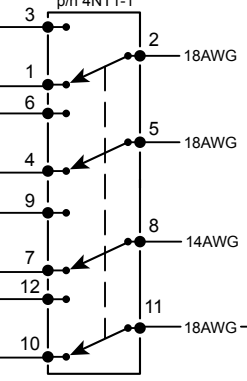

Notes:
 1. Be sure to follow instructions from engine supplier.
 2. Other connections to avionics etc not shown.
 * ANL 60 only required if batteries mounted in back and fuse blocks mounted in front. Not needed if fuse blocks are near battery.

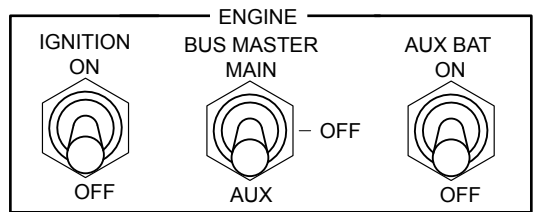

MAIN FUEL PUMP
(Aux is on Control Unit)

ECU

IGN/Coils

Turbo Scavange pump (turbo only)

-or-
Prop Control (change to 15A fuse and 14 AWG wire)

Note: use EITHER this connection or one above to the Control Unit